





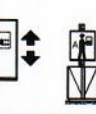 


1.5 CONTROLS BUTTONS ON THE MACHINE

Inside cabin controls:

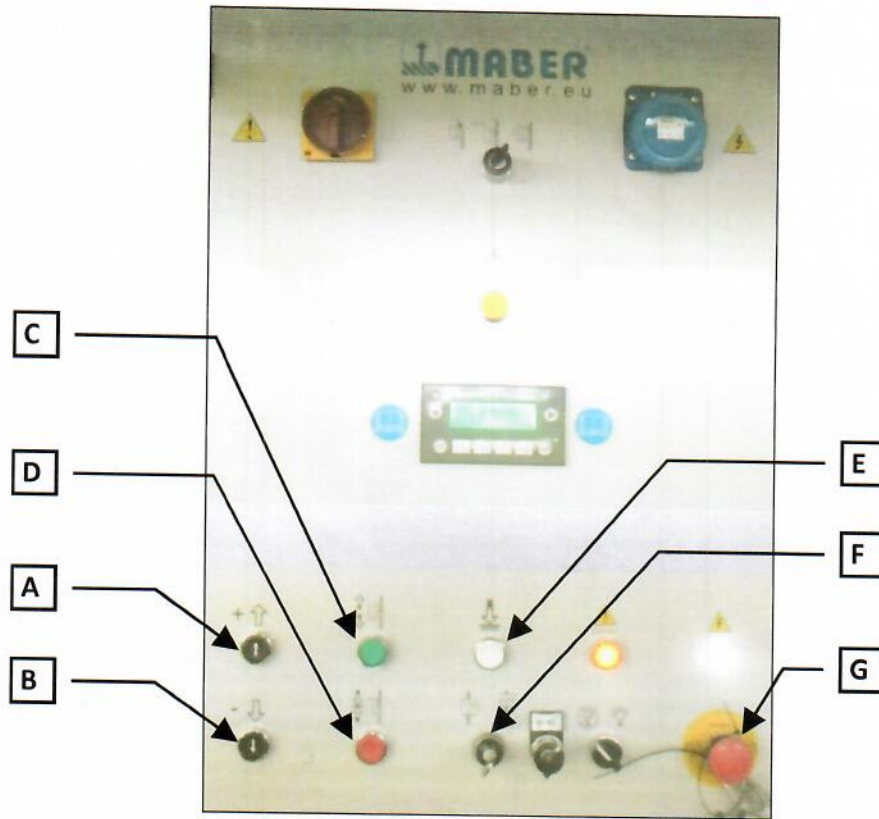

Legend:

A		Increase the floor of destination : Press this button to increase the floor of destination; this button works only if the hoist is not in movement and with the green light of the "C" button (C) OFF.
B		Decrease the floor of destination: Press this button to increase the floor of destination; this button works only if the hoist is not in movement and with the green light of the "C" button (C) OFF.
C		Go to floor: Press this button to start the movement, after the setting of the floor of destination. The button has the following warning lights: - Green light fix , when the hoist is in movement. - Green light off , when the hoist is not in movement thus "free" - Green blinking light , when the hoist is at a floor thus "busy"
D		Stop next floor: Press this button during the machine run to stop the hoist at the first encountered floor during its movement upwards or downwards.
E		Go to ground (floor No. 0): Press this button to go directly to "floor No. 0" without setting the floor of destination.
F		Selector to enable outside controls: Turn it right side to ALLOW / ENABLE the signal reception from the wireless controls pendants and thus the controls from outside.

When inside the hoist, set the floor of destination.

1.5.1 FUNCTIONING FROM INSIDE THE CABIN

When the empty hoist stops at the floor to pick-up workers, it means that the machine is "free". Once inside the hoist:

- Set the floor of destination by (A) and (B) buttons and start the hoist movement with (C) button
Or
- Press (E) button to reach directly floor No. "0".

Be aware that if the outside controls are ON tank to (F) selector:

- Upwards the hoist stops at each floor that has a booking in this direction of movement
- Downwards the hoist stops at each floor that has a booking in this direction of movement

When the hoist stops at the floor with the booking, enter the cabin. If you find inside other people it means that:

- The floor of destination has already been selected (floor No. 0 or a previously set floor)
- The hoist turns to be "busy"
- With the hoist not in movement, the green light of the "go to floor button" (C) is blinking.
- The selection of the floor of destination or go to ground is not possible (buttons A,B,C,E are disabled)



IF YOU PRESS THE INSIDE CABIN EMERGENCY BUTTON (G), YOU CANCEL THE SELECTED FLOOR AND ONCE THIS BUTTON PRESSED, THE HOIST TURNS TO BE "FREE".

Once people loaded and the doors closed, the hoist continues its run until the floor of destination that has been previously set.

When the hoist reaches its destination and it is not in movement:

- The green light of (C) button -"go to floor" turns OFF
- It is now possible to make a new selection of the floor of destination (buttons A,B,C,E are enabled)

If the hoist is empty and the doors closed, it will start its run to reach the first available booking (if present).

To stop the hoist at an intermediate level between 2 already set floors upwards or downwards, press (D) Stop button at the next floor.

1.6 FLOOR BOOKING UPWARDS FROM THE GROUND PANEL

Press the white button (T) (the only button present on the panel) to call the hoist ground level and then to go upwards with the machine.

