



1.4.1 **BUTTONS ON THE FLOORS CONTROLS PENDANTS**

Press the buttons to move the hoist upwards/downwards

	<p>FLOOR BOOKING BUTTON (UPWARDS).</p> <p>Press this button to go UPWARDS and reach the floors. Once the reservation made, the hoist will stop upwards to pick up workers at the floor before reaching the previously set floor on the internal display. If the hoist is free without others bookings, after the pressure of this button the hoist will directly reach that floor.</p>
	<p>FLOOR BOOKING BUTTON (DOWNWARDS).</p> <p>Press this button to go DOWNWARDS and reach the floors. Once the reservation made, the hoist will stop downwards to pick up workers at the floor before reaching the previously set floor on the internal display. If the hoist is free without others bookings, after the pressure of this button the hoist will directly reach that floor</p>

WARNINGS:

When the hoist reaches a floor, the bookings upwards or downwards are cancelled.

Always press the correct floor-booking button because once on the hoist, it could not be possible to invert the selected way of run.

The "**Floor booking button- UPWARDS**" of the last floor control pendant **INSTALLED TO THE LAST RECORDED FLOOR** è is automatically disabled by the machine software.



WHEN THE HOIST STOPS AT A FLOOR, OPEN THE DOORS WITHIN 5 SECONDS. IF YOU DO NOT OPEN THE DOORS WITHIN 5 SECONDS, IN CASE OF ANOTHER BOOKING, THE HOIST WILL START AGAIN ITS RUN.